



ELEVATION A

1 TYPICAL BATHROOM ELEVATION

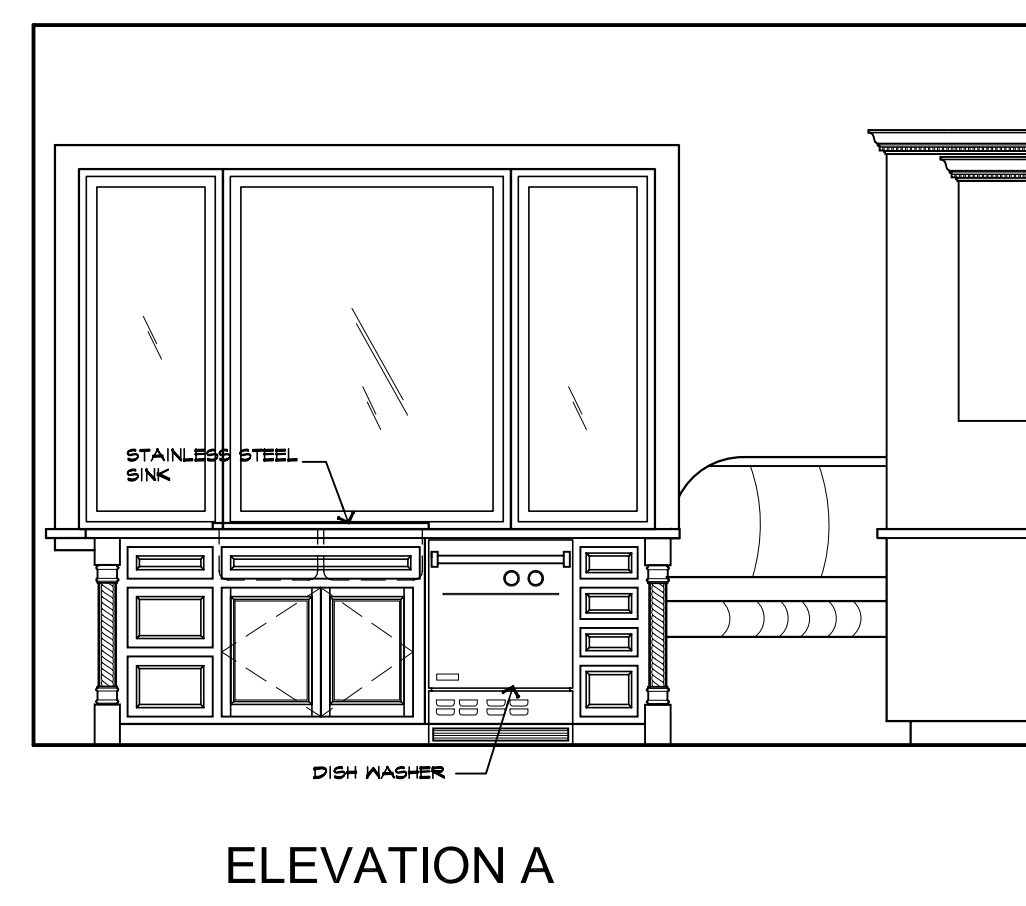


ELEVATION A


2 KITCHEN ELEVATIONS

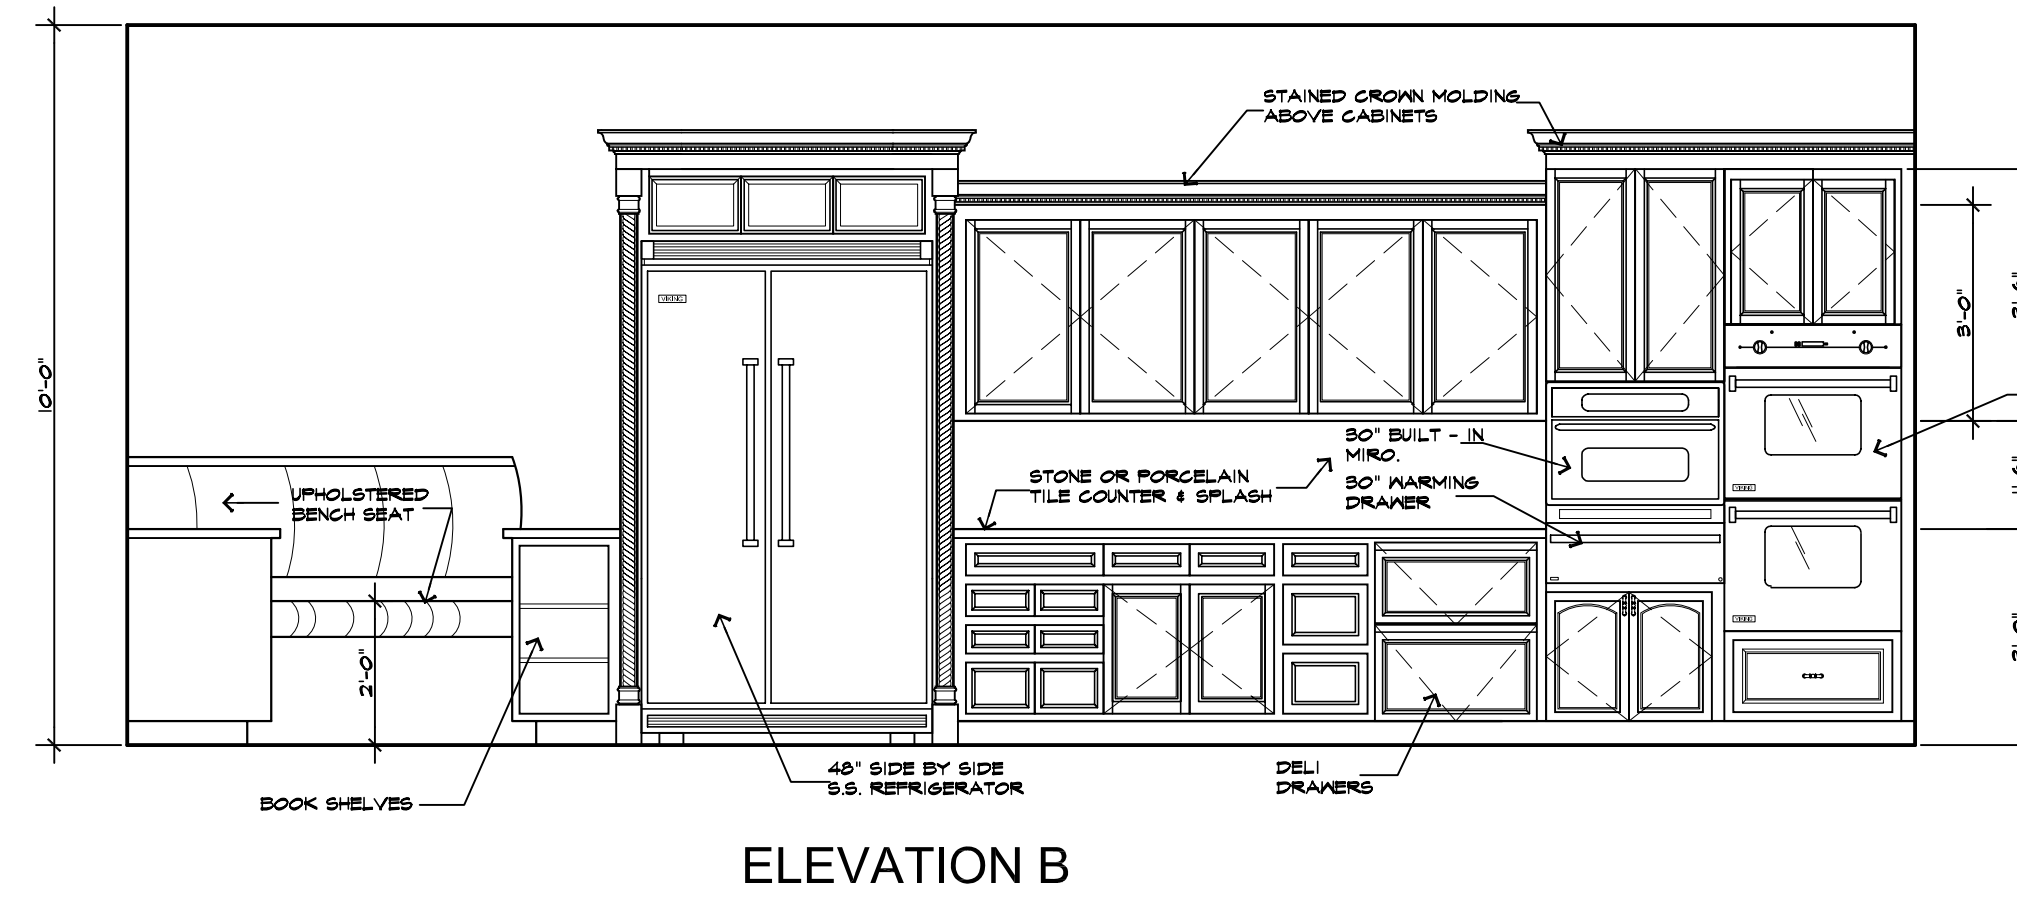

ELEVATION B

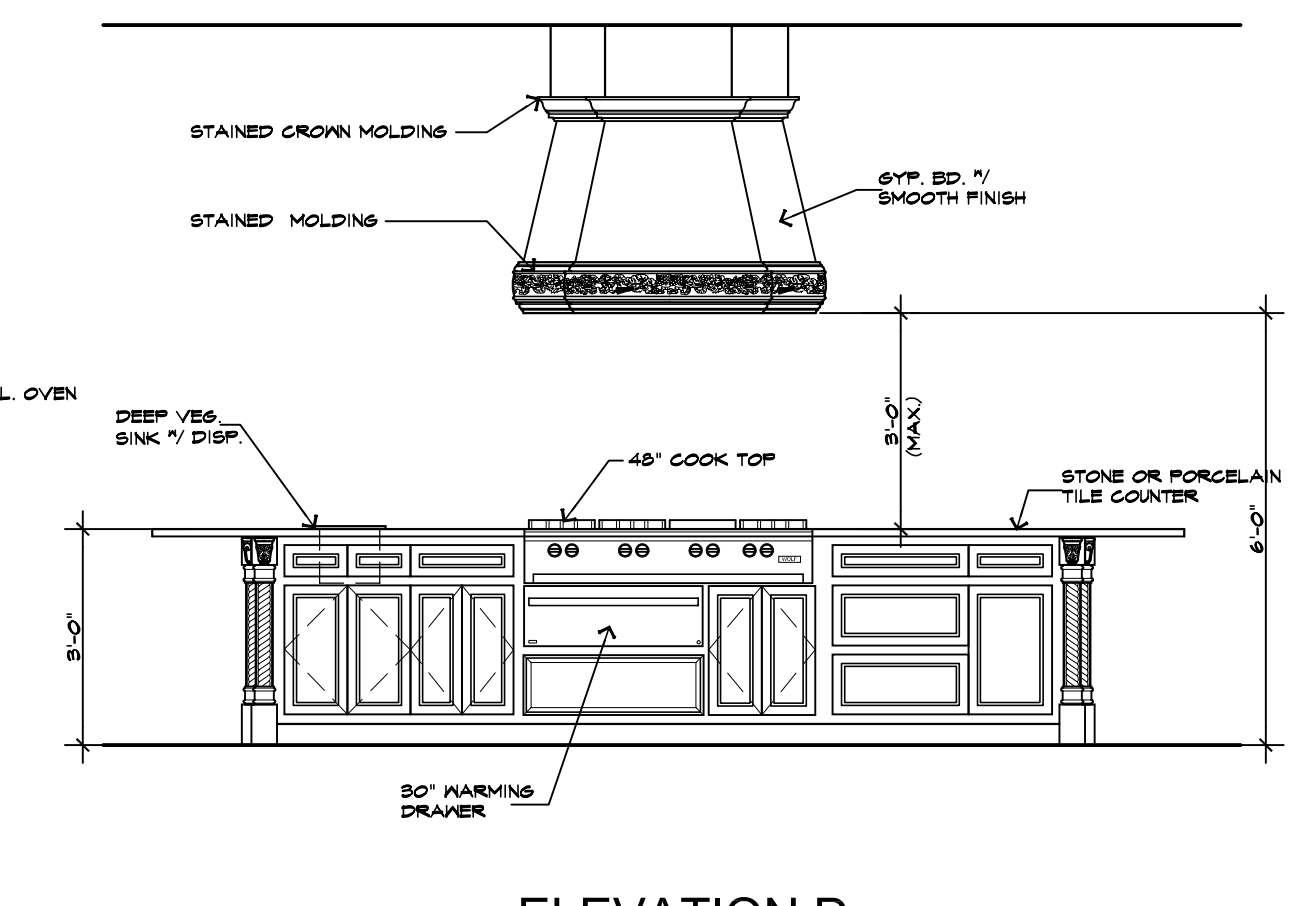


ELEVATION D

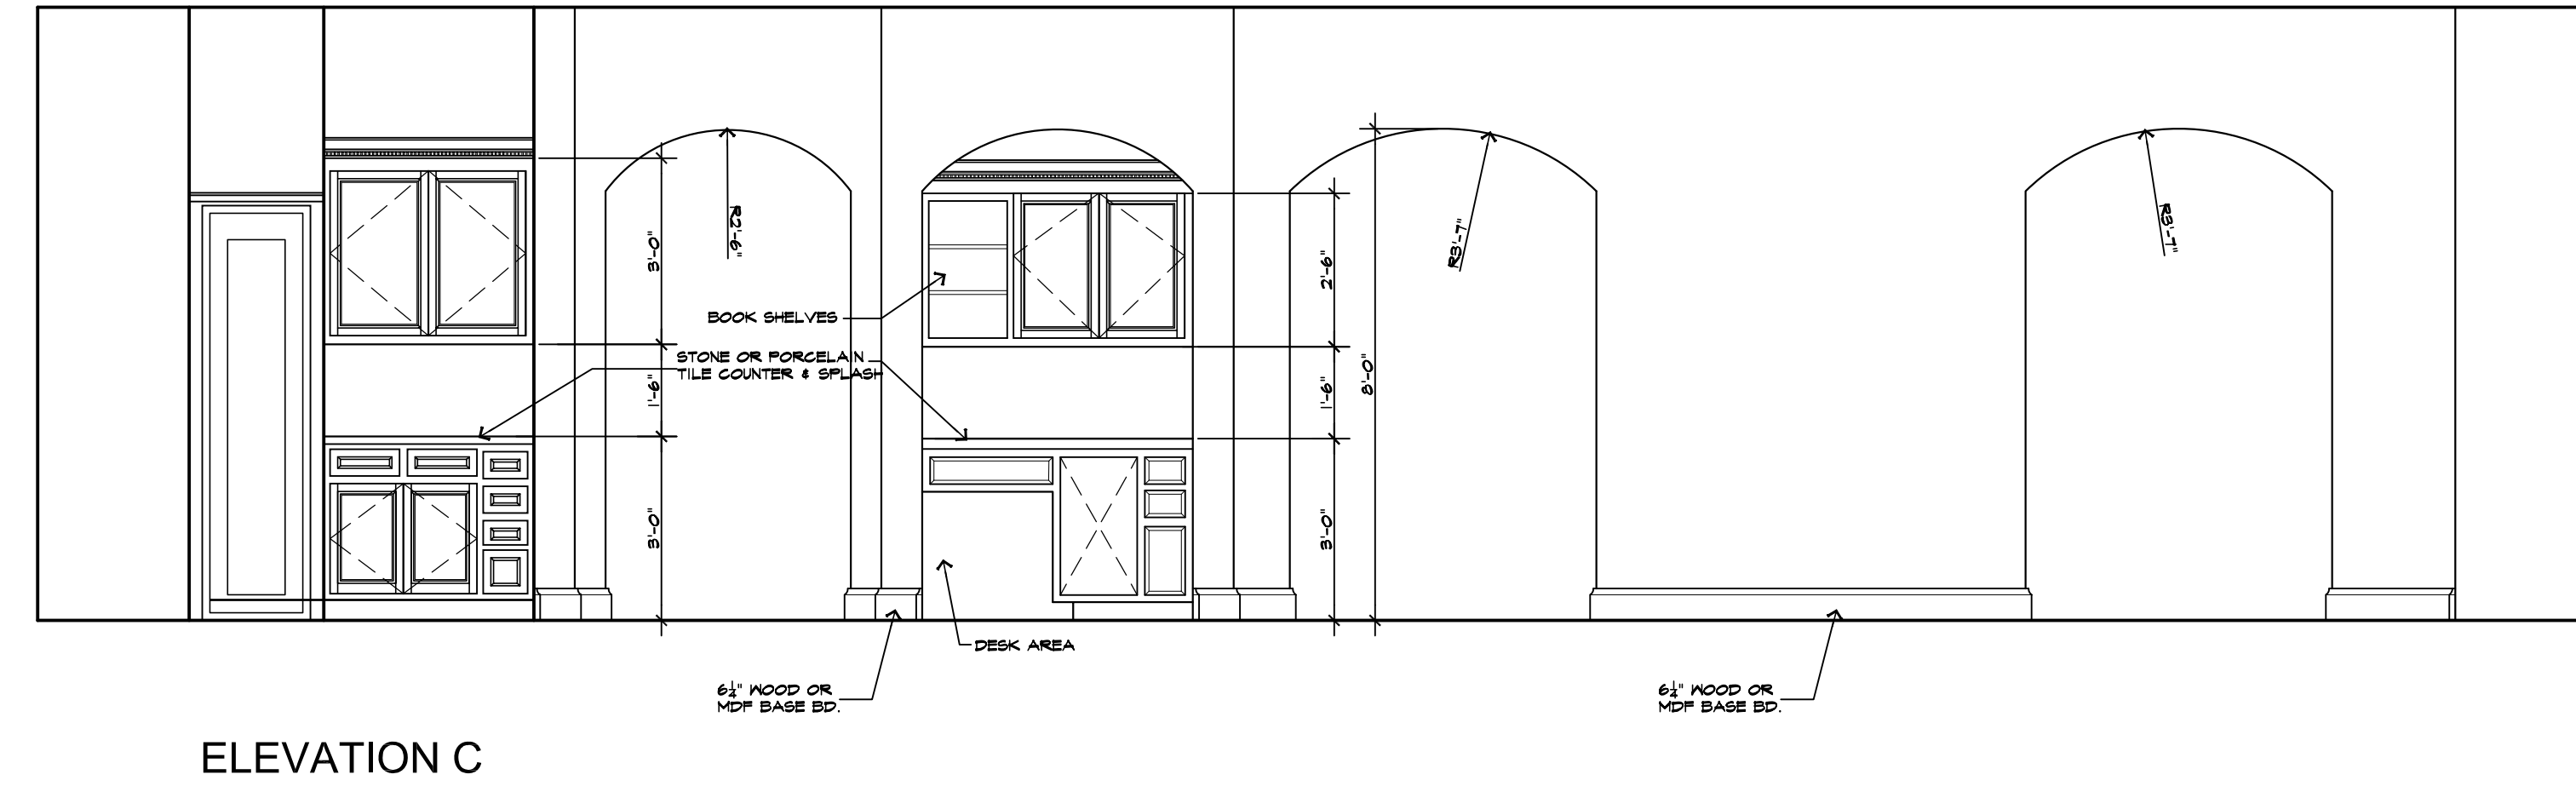


ELEVATION C

2 KITCHEN / GREAT ROOM ELEVATIONS

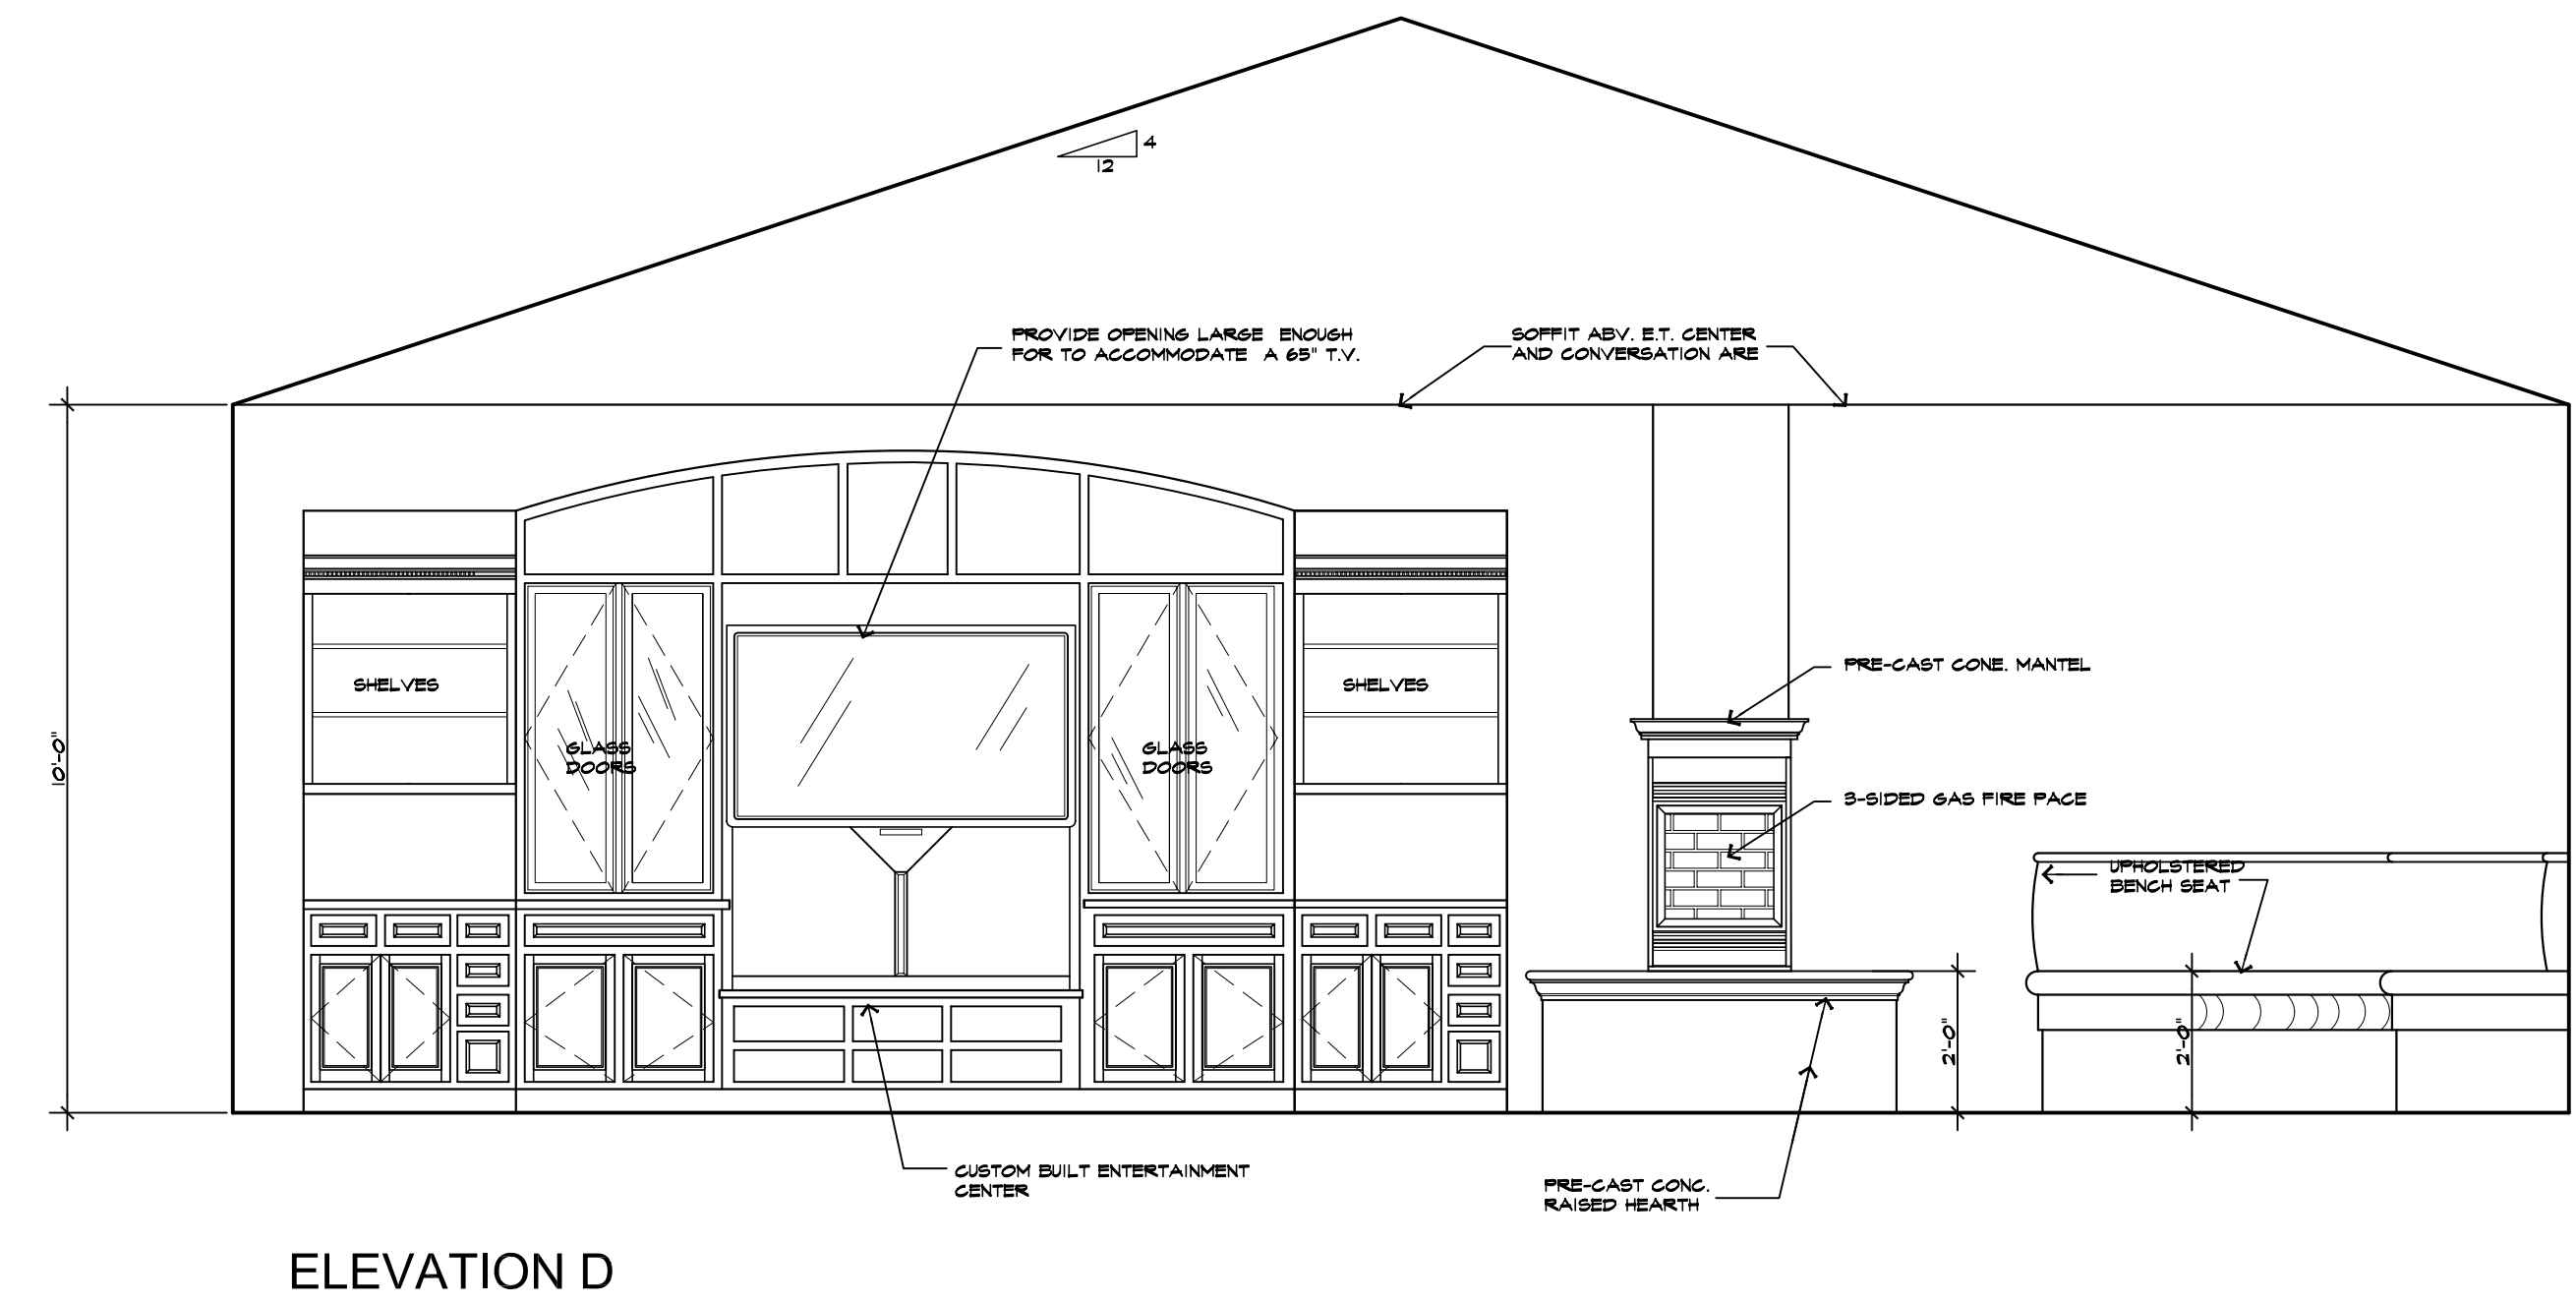


ELEVATION D

3 GREAT ROOM ELEVATION

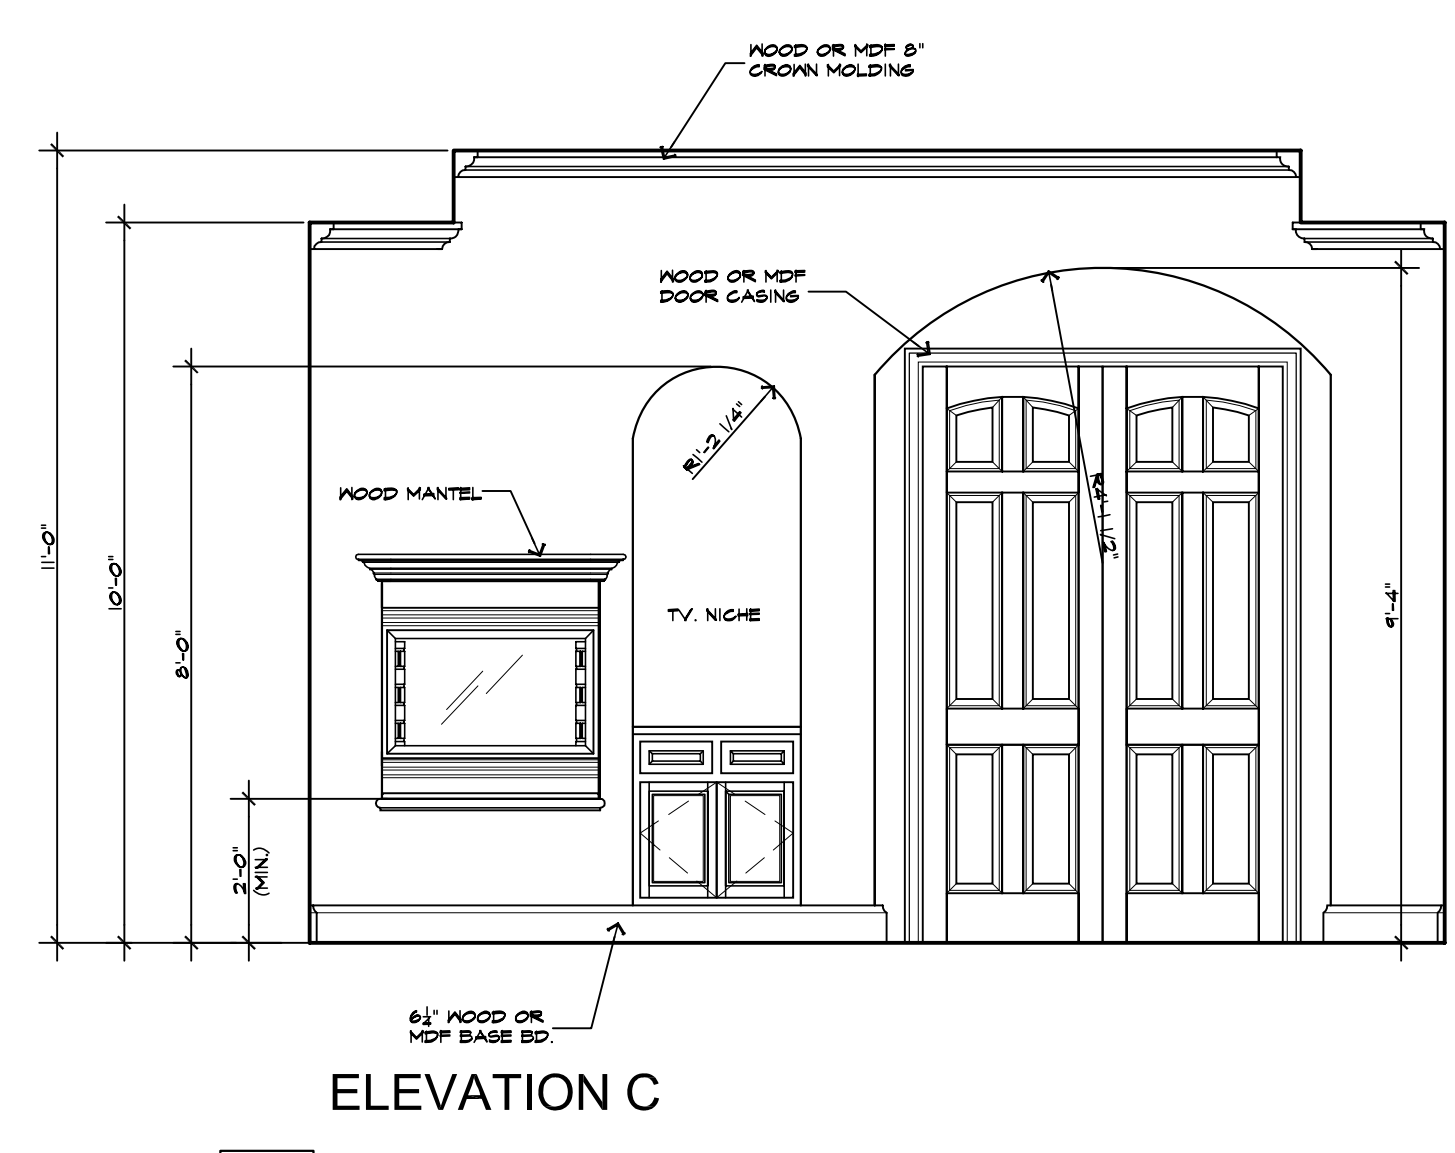


ELEVATION C

4 MASTER BEDROOM / RETREAT ELEVATIONS

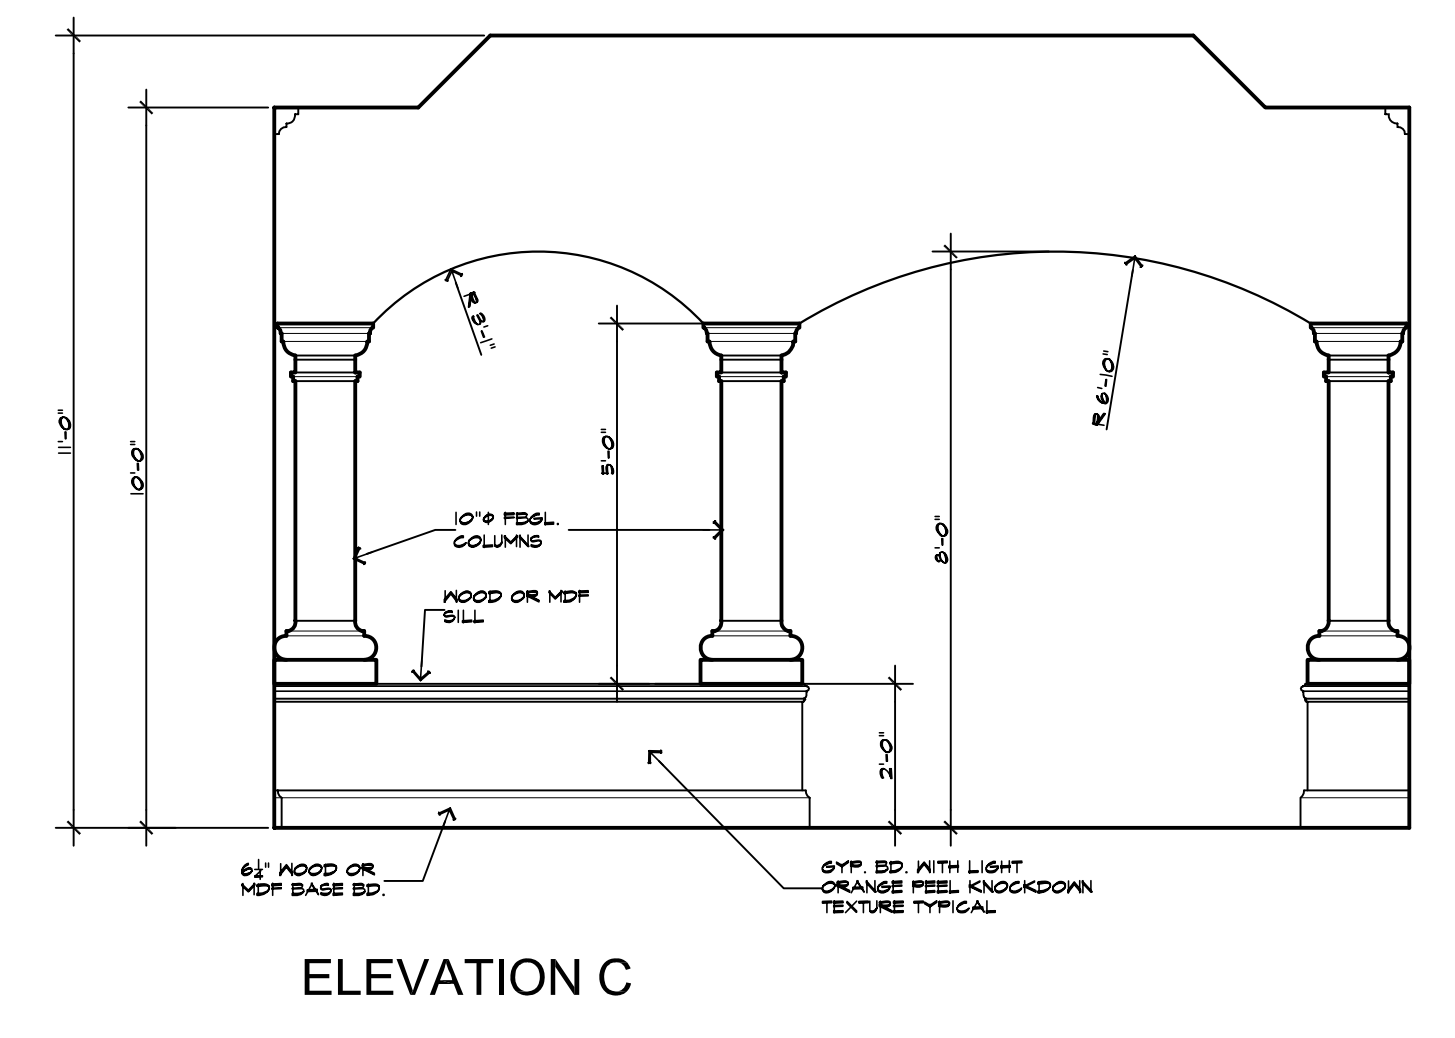


ELEVATION C

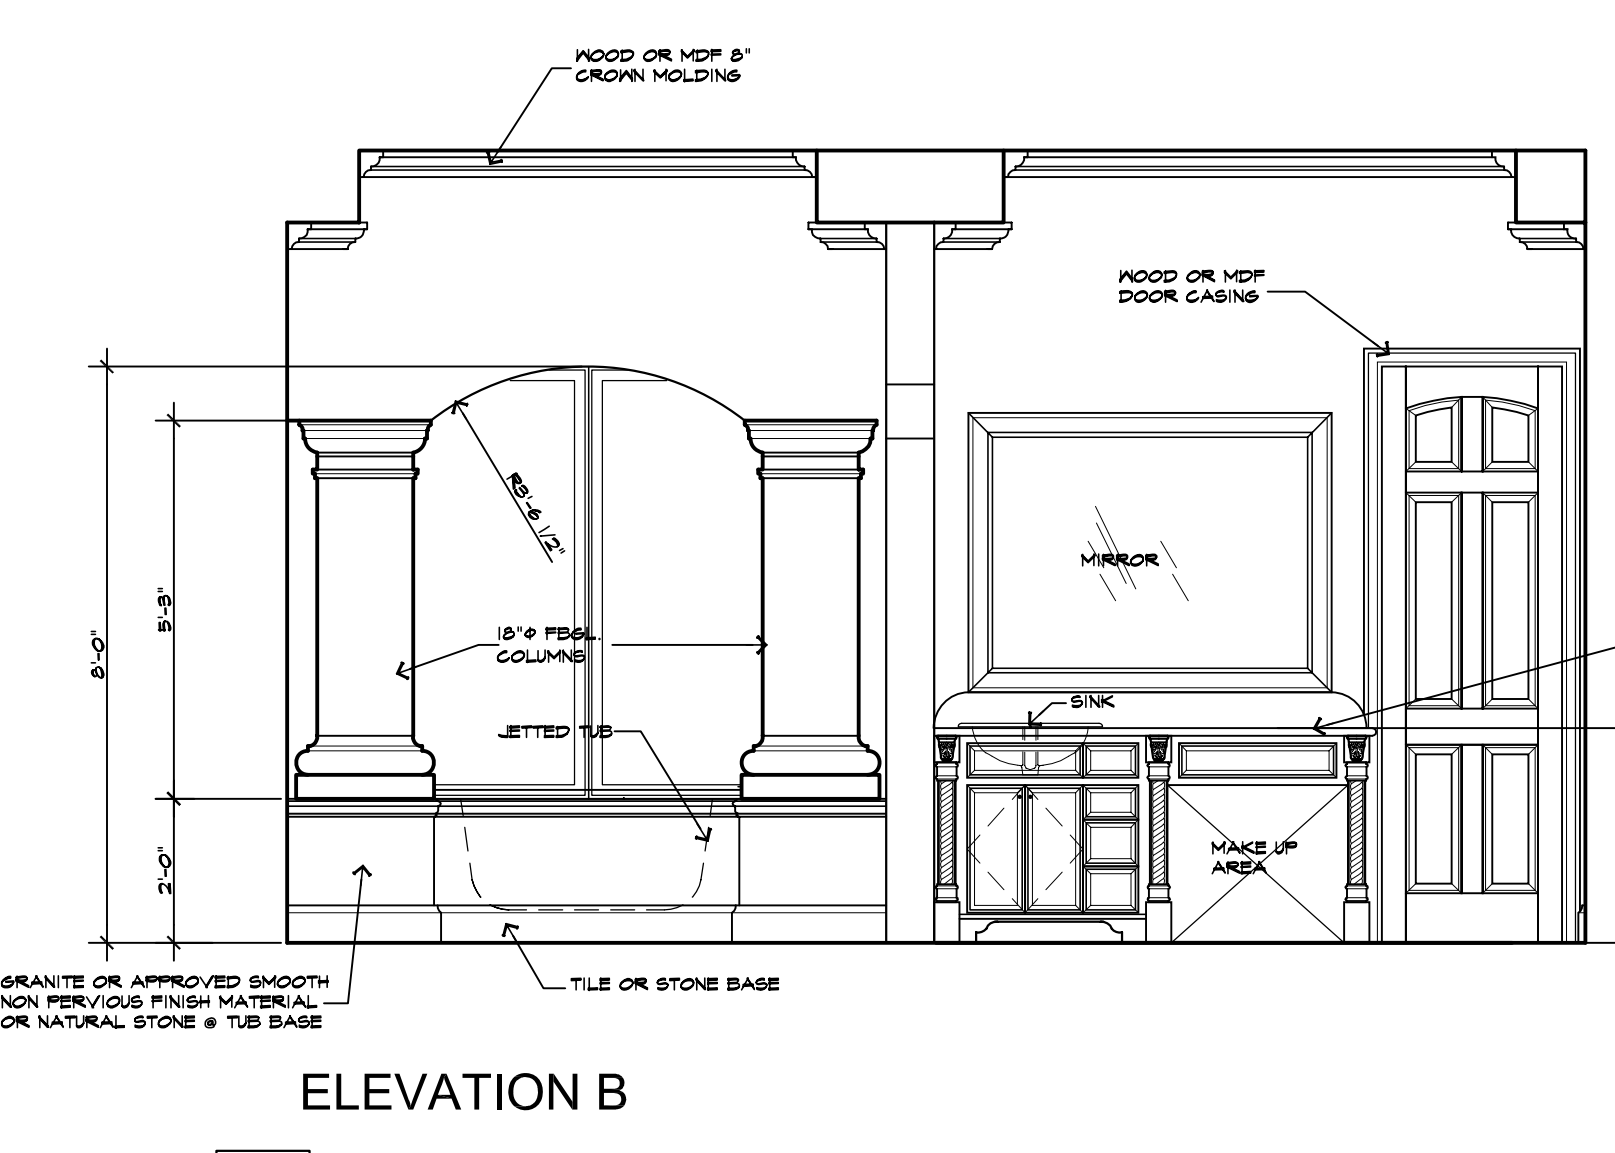


ELEVATION B


5 MASTER BATH ELEVATIONS

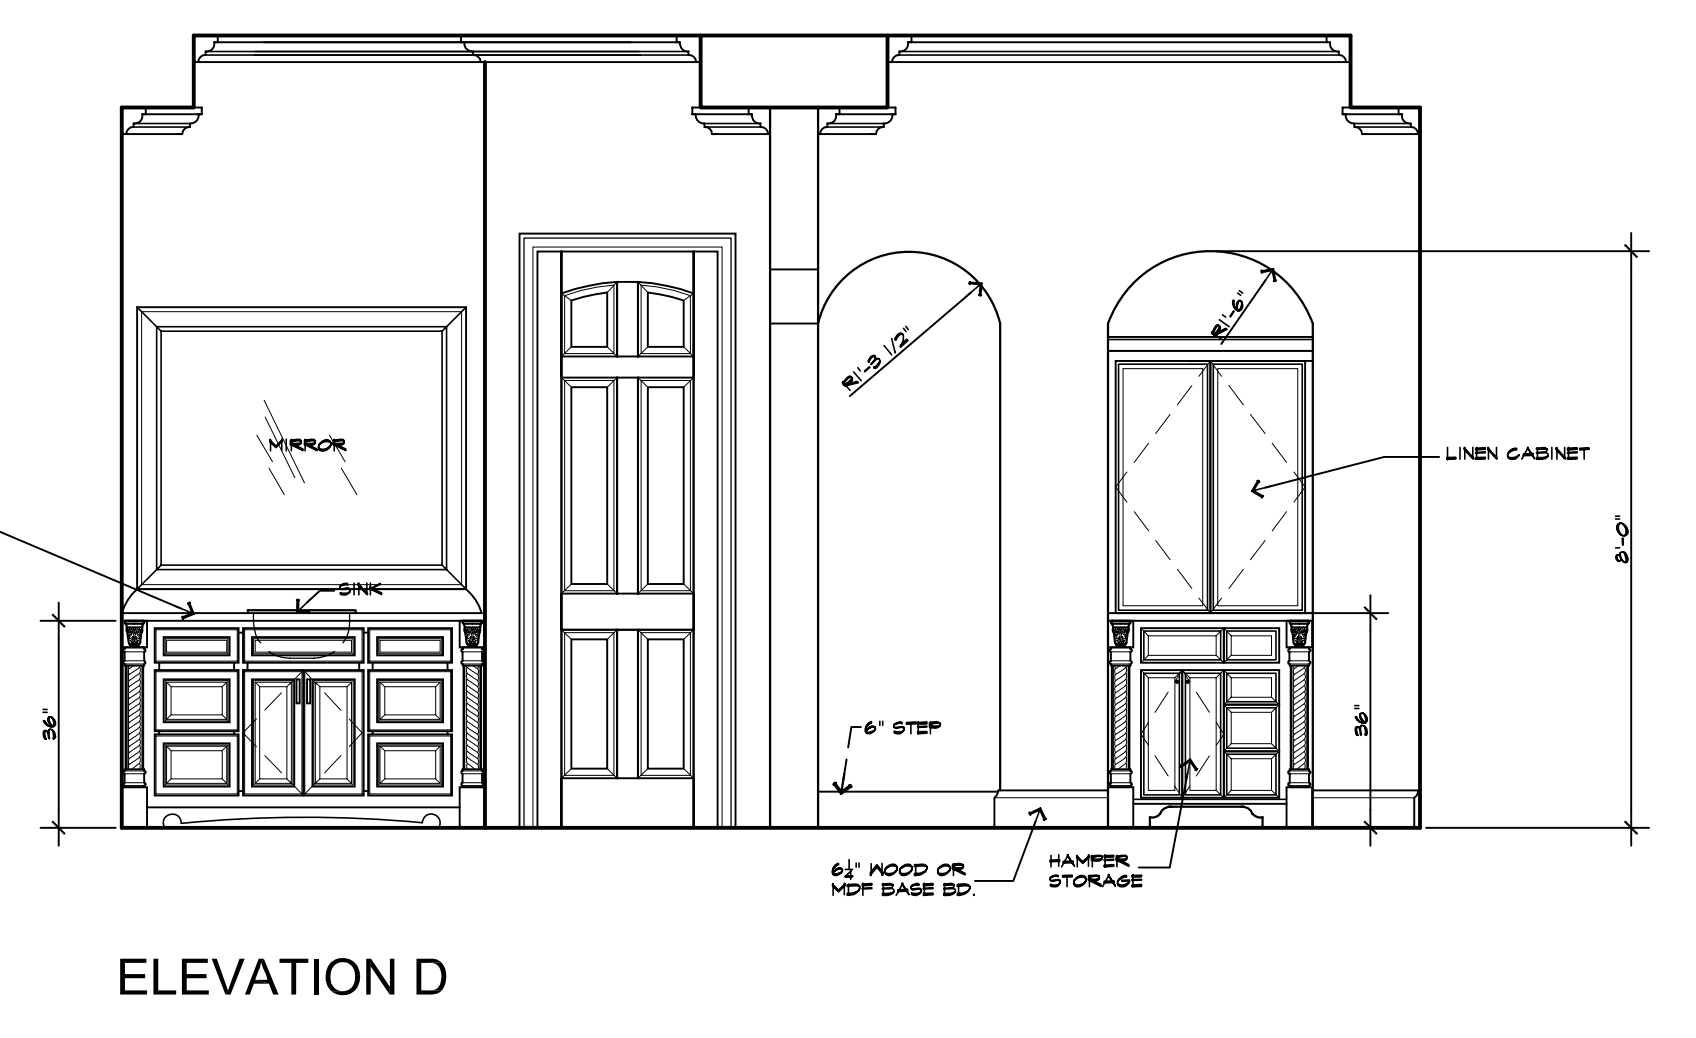


ELEVATION D

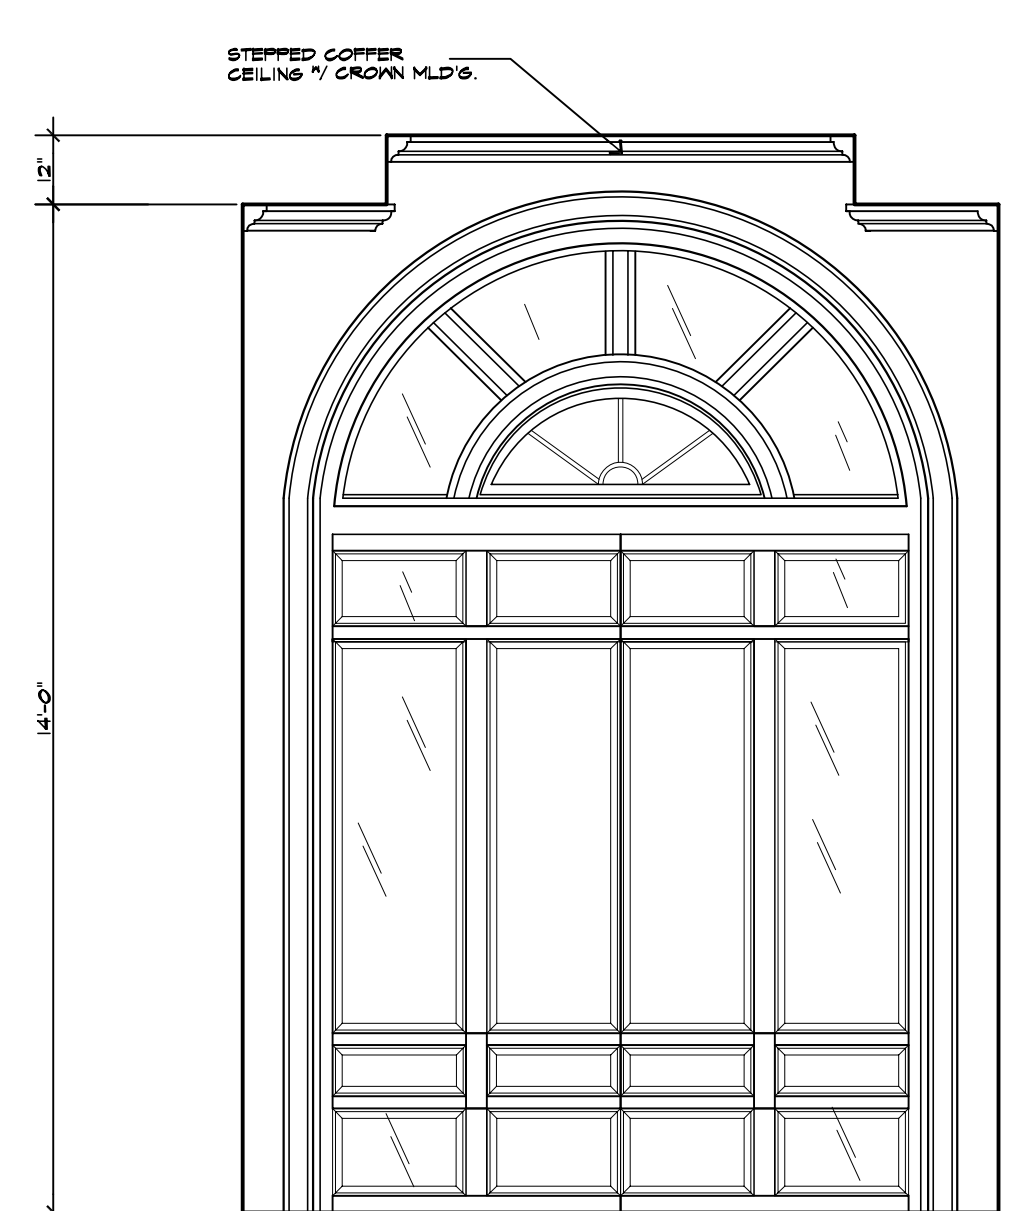

ELEVATION C (OPTION 1)

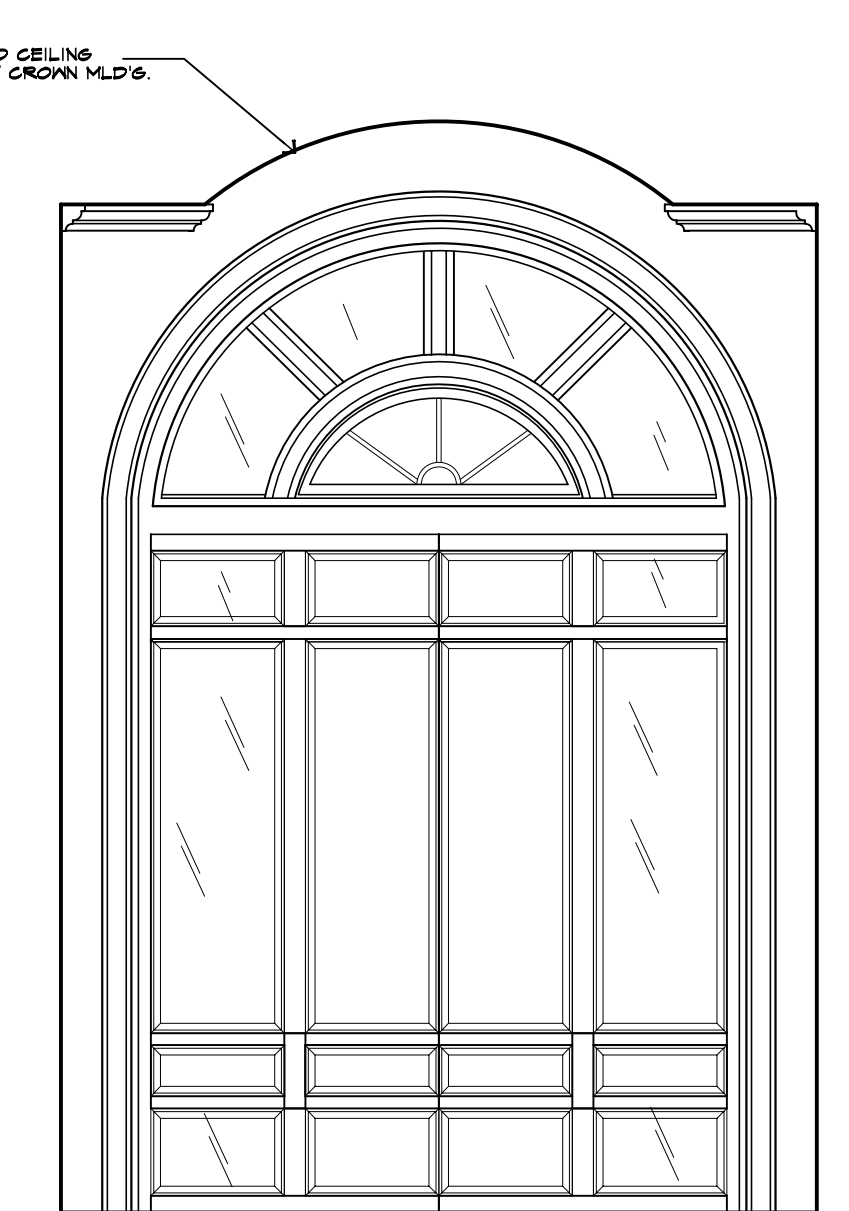

ELEVATION C (OPTION 2)

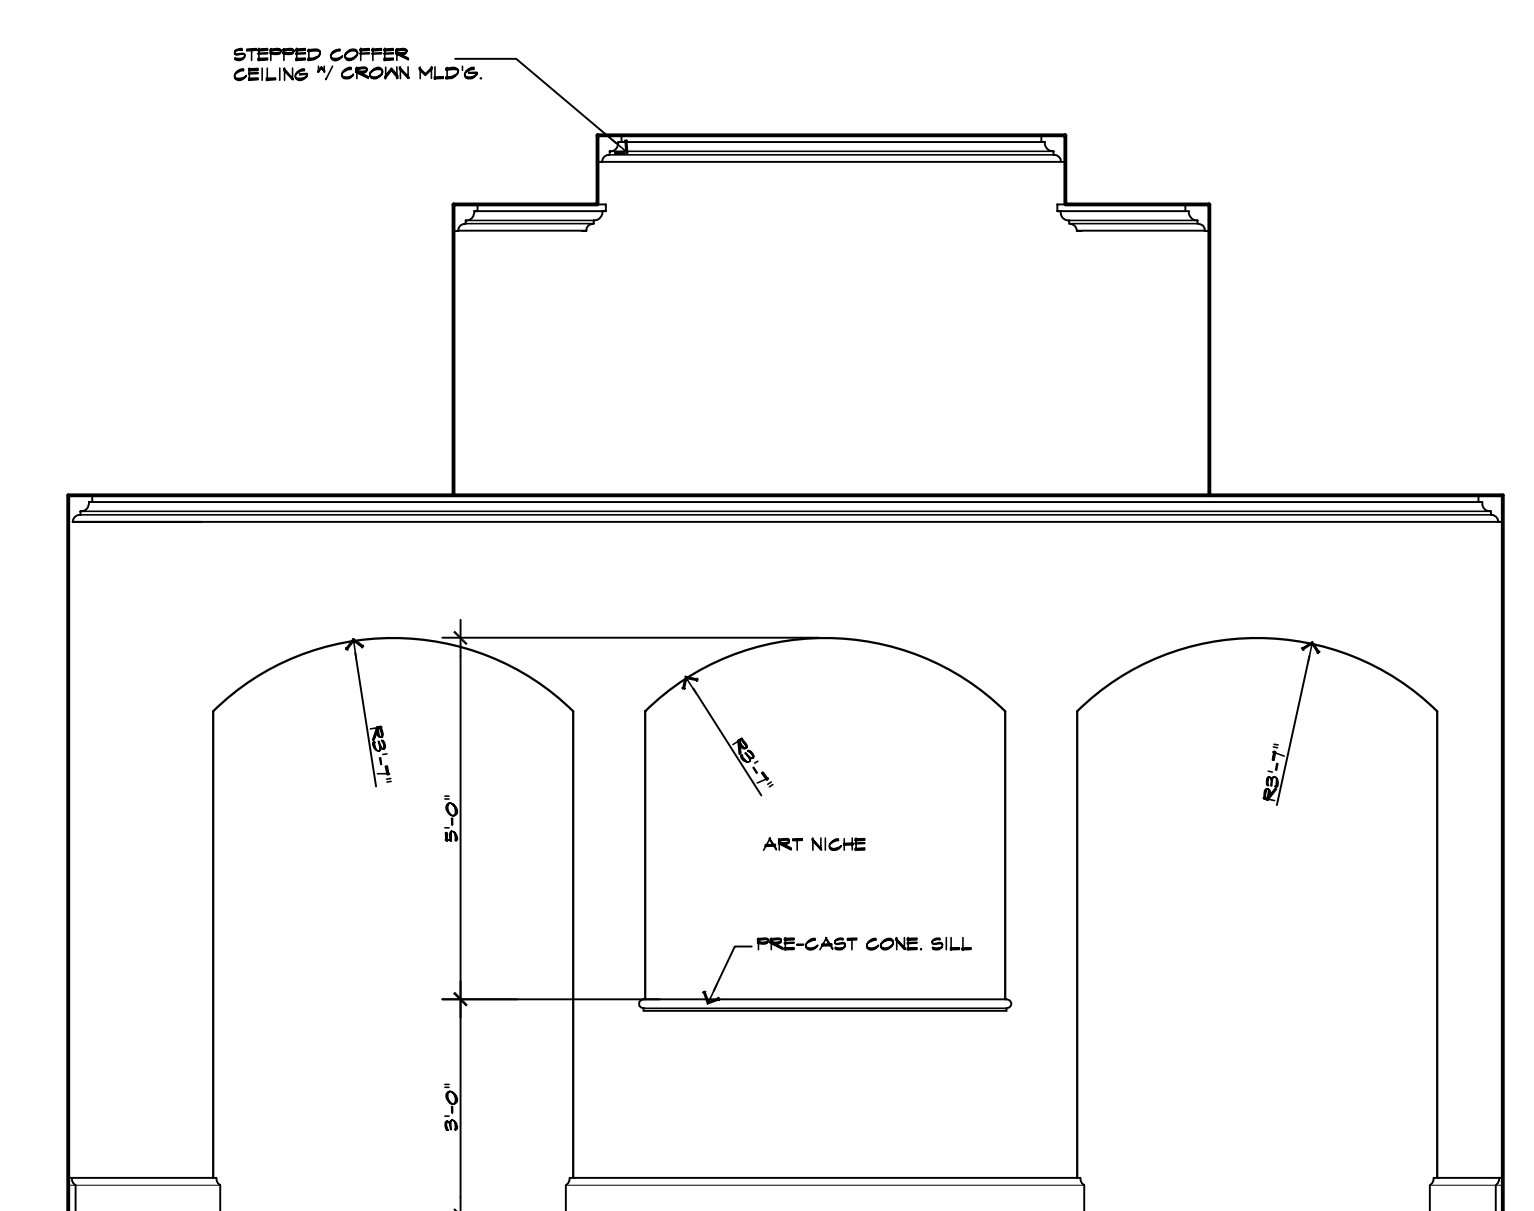

ELEVATION A

6 ENTRY ELEVATIONS

NOTE:  
 1. BUILDER SHALL VERIFY WITH OWNER WOOD TYPE FOR ALL CABINETS, MOLDING, AND MILL WORK AROUND DOORS AND WINDOWS.  
 2. VERIFY WALL TEXTURE WITH OWNER.  
 4. PROVIDE UNDER CABINET LIGHTING BELOW ALL UPPER CABINETS